



Cartridge Jet filter CQFG

Maintenance manual (EN)

As of 2019 - V1.0-2021

Content

1.	Introduction	3
1.1.	EC- declaration of incorporation	3
2.	General description	4
3.	Functioning	5
3.1.	Unit condition during operation	5
3.2.	Intentional / unintentional application	5
3.3.	Daily maintenance	5
3.4.	Maintenance	6
3.5.	Cartridge replacement	7
3.6.	Filter element cleaning	8
3.7.	Jet valve exchange/repair	8
4.	Mounting	8
4.1.	Unit delivery	8
4.2.	Filter unit placement	9
4.3.	Electrical connections	9
4.4.	Compressed-air connection	9
4.5.	Ducting connection	9
4.6.	Rotary valve (optional)	9
4.7.	Adjustments	9
4.8.	Differential pressure control	10
5.	Noise damping	10
6.	After maintenance	10
7.	Differential pressure control - type ECO-S	10
7.1.	General description	10
7.2.	General features	10
7.3.	Technical features timer	11
7.4.	Technical features Active Analog Output (optional)	11
7.5.	Dimensions and features of ECOMATIC-S box	11
7.6.	Layout – Legend Board ECOMATIC-S	12
7.7.	Layout – Legend Delta-P Board ECOMATIC-S	15
7.8.	ECOMATIC-S Power Supply	15
7.9.	Electro-valves Connection Scheme	16
7.10.	Display visualization	17
7.11.	Error visualization	18
7.12.	Preliminary Procedures	18
7.13.	Programming Parameters	19
7.14.	ECOMATIC-S Function	20
7.15.	Delta-P Tubes Connection Scheme	20
7.16.	Pressure Zero Setting	21
7.17.	Active Analogical Output Functioning (optional)	21
7.18.	Relay Output Functioning	23
7.19.	Post-Cleaning Functioning	24
7.20.	Precoating Functioning	24
8.	Dismantling and recycling	25
9.	Maintenance log	26
	Contacts	27

1. Introduction

This manual cannot be reproduced, even partially, without prior written consent by Formula Air Group. Every step of the filter range has been deeply analyzed by Formula Air Group in the expected area during the design, construction, and user manual creation. However, it is understood that nothing can replace the experience, training and good sense of those professionals who work with the device.

Ignoring the cautions and warning from the present user manual, using improperly parts or the whole device supplied, using unauthorized spare parts, manipulating the device by non-qualified personnel, violation of any safety norm regarding design, construction and use expected by the supplier, exempt Formula Air Group from all responsibility in case of damages to people or properties.

Formula Air Group does not take any responsibility for the non-observance of the user about the preventive safety measures presented in this user manual.

Failure to comply with the requirements of the user manual or incorrect use of the filter during operation can lead to the damage of the filter and improper functioning of the filter itself. This will result in termination of the warranty on the item and will release the manufacturer from any liability.

Warranty

Regarding to the device's warranty, see the sales general condition.

Attention !

All drawings and references contained within this user manual are non-contractual and are subject to change without prior notice at the discretion of the Formula Air Group and its partners.

Copyright © Formula Air.

1.1. EC- declaration of incorporation

EC-Declaration of Incorporation for Partly Completed Machinery

Machinery Directive 2006/42/EC Annex II B

The undersigned manufacturer and authorized for the elaboration of technical documentation for partly completed machinery and by due request hand over the technical dossier to the national authorities :

Manufacturer: V. Aa. Gram A/S
Lysbjergvej 10, Hammelev, DK-6500 Vojens Tel.: +45 74 52 30 75, Fax: +45 74 53 01 64

The undersigned hereby declare that:

Partly completed machinery: Jet filter

Mark: Gram

Type: CQFG

Size: XXX

Order no.: XX XXX XXX

Year: 20XX

was manufactured in conformity with the following essential health and safety requirements in the Machinery Directive 2006/42/EC Annex I:

The following harmonized standards were used:

- EMC-Directive 2014/30/EU
- Pressure Equipment Directive 2014/68/EU
- Low Voltage Directive 2014/35/EU
- EN 12100
- EN ISO 13857
- EN 349
- EN 3746
- EN 4414
- EN 60204-1

The partly completed machinery may not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with all relevant health and safety requirements in the Machinery Directive 2006/42/EC and other relevant Directives.

Position: X

Name: X X

Company: V. Aa. Gram A/S

XXXXXXXXXXXXXX

(Signature)

2. General description

The CQFG jet filter is a partly completed machine used for separation of dust from process air.

Standard unit: Max. 5,000Pa


Temperature range: -10°C - +50°C

Standard enamelling is powder enamelling for indoor mounting.

For outdoor mounting the unit must be manufactured in galvanized and powder enamelled version.

The unit types may not be used in connection with ATEX-classified areas.

3. Functioning

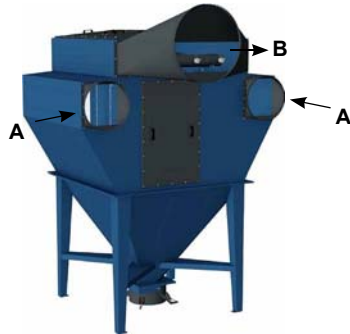

Process air is led in by (A), where after the air passes pre-separator and filter elements. Air leaves unit at (B).

Filtered material is collected in an emptiable dust container.

3.1. Unit condition during operation

All filter doors must be closed and secured.

The dust container must be mounted and locked correctly during all steps of filter operation.

3.2. Intentional / unintentional application

Filter units may not be used for the extraction of burning or glowing substances, like e.g. cigarettes, matches. Larger chips (above 20 mm), paper strips, cleaning wipes etc. At extraction of chips and the like a pre-separator as cyclone type CY/LCY must be used, which is used as coarse separator.

Standard units cannot be altered to ATEX-units.

In ATEX-zones units may only be used that are marked for the same zone. Filter units cannot be converted to another zone.

Repairs may only be performed with original spare parts.

3.3. Daily maintenance

Differential pressure is monitored every day either by analog or digital display. May not exceed 2,300 Pa. However filter materials G115A and G116A may increase to 3,000 Pa.

Dust container is emptied according to need, but may never be filled more than max. 75%. The filling of container/sack may by weight not exceed 20 kg.

To avoid that dangerous dust escapes at container emptying, the power supply to filter control must be disconnected for at least 1 minute before replacement, so shots are avoided, and dust settles in sack, and the air flow through the unit must be stopped.

At work with dangerous dust a plastic bag is placed in the dust container. In units, where there is a sack in dust container, sack must be strap with included sack band. Do not forget that pressure equalization holes may not be covered (see photo A, B & C).

When the bag must be removed, it is straightened out in its full length and is closed with 1 pcs. strips, before it is taken out of the dust container to be destroyed according to governmental demands.

Before container insertion in unit, the container sealing is checked for damages (see up under the container locking system). Sealing must be replaced, if any damages are recorded. When the container is inserted, the front handle must be up behind the downwardly bent edge on the locking system. This ensures that the container is placed correctly at container sealing towards unit.


After container insertion, the supply voltage and compressed-air are connected.

Be aware that the unit cleans as required. Unit must always clean at exceeding the differential pressure of 0.9kPa (900 Pa) If unit does not clean, contact service technician.

It is important that unit cleans after operation. Compressed-air and supply voltage must be connected for the time of min. 5 cleaning cycles for all valves in the unit. If unit is equipped with material outlet damper or sluice, these must be active in the whole after-cleaning time, so waste is brought out of the filtering zone.

Repairs may only be carried out by professionally trained personnel.

ATTENTION:
Make sure the perforations are not obstructed!

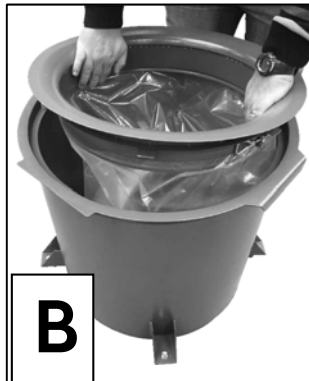

3.4. Maintenance

Filter unit must be maintained 1 to 2 times a year to work optimally.

Filter cleaning control is checked (fan must not operate):

- The settings of differential pressure control are checked (see instructions for differential pressure control type ECO-S in the back of these instructions).

Differential pressure is monitored every day either by analog or digital display. May not exceed 2,300 Pa.

However, at the use of filter materials G115A and G116A the differential pressure may not exceed 3,000 Pa.

Check that all valves shoot correctly. If the valves are checked with open clean air chamber, you must use ear defenders for 95-110 dB(A) (SNR=35), e.g. Peltor Optime III from 3M.

With electrical supply removed check the tightness of pipe connections, tank and valves. Tank is emptied for water by ventilating valve beneath tank.

When compressed air is disconnected, check clean air chamber for possible dust.

If dust occurs, check filter sealing and filter elements for untightnesses. Sealing at doors and dust container are checked for damages – possible defects are corrected, or if necessary sealing are replaced.

At filter defects, tight filters that cannot be washed (G105 and G104A), or worn-out filters are replaced. Use protection clothing, gloves and full-face mask respirator with filter adjusted according to work place dust type.

Filter cartridge durability is variable, depending on circumstances like filter stress, dust type and volume.

Filter cartridges get blocked with time owing to very fine particles that attach themselves between the fibers.

Also, be aware whether compressed-air operates with defect water separator. This means an internal dirtying of filter cartridges. Under normal circumstances there will be a certain dust layer on the outside of cartridge, even after compressed air cleaning. This layer increases the filtration capacity and the differential pressure.

If noticeable capacity reduction occurs, we recommend cartridge cleaning with high pressure cleaner. See washing instructions under 9.2. (be aware that used water disposal from cleaning takes place according to local governmental instructions).

Every filter cartridge is mounted with bayonet grip attached with 3 bolts in filter mounting plate.

Clean air chamber cleaning in connection with main inspection is performed before startup.

See maintenance log (Point 12.).

3.5. Cartridge replacement

Every electric supply must be disconnected as well as pressure tank emptied for air before filter replacement.


Do not forget suitable respiratory protection!

3.5.1. CQFG 104





- Top lid is dismantled, and all filter bolts are screwed completely down (photo C).
- Cone bolt in filter bottom is removed (photo D).
- A plastic bag is guided up around the filter cartridge from beneath (photo F). Cartridge is turned clockwise, until it is released from the bolts. Cartridge is taken out.
- Cone is removed, and the bag is closed with 1 pc. strips (photo G).
- The used cones are mounted in the new filter cartridges. Sealing is checked.
- Cartridges are hung on the filter bolts and are turned counter-clockwise for full grip.
- Filter bolts are fastened (photo D). Lid is mounted.

3.5.2. CQFG 312, 416 & 520

- Door between raw air connections is dismantled.
- Door in cone is dismantled. Through opening the step gratings are inserted (see cone module side) on the flat steel (The first two are placed to the right and left side respectively to make room for the third one. Photo H).
- Place the step gratings to ensure that they lock in the slots.
- Top lids are dismantled. Bolts for filter cones are removed (photo E). All filter bolts in the clean air chamber are screwed completely down (photo D). Now the filter cartridges can be removed.
- Filter cartridges are removed in the following order:

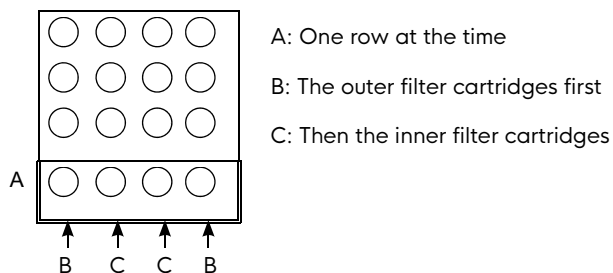

- Mounting of new filter cartridges in reverse order.
- A plastic bag is guided up around the filter cartridge from beneath (photo F), the cartridge is gripped and turned clockwise until it is released from the bolts.
- Filter cartridges are removed from the filter units, filter cone is removed, and plastic bag is closed with 1 plastic strip (photo G).
- The new filter cartridges (check sealing) with the used filter cones are hung on the filter bolts. They are fastened hereafter (photo D).
- Remove step gratings to be placed on unit side. All doors are mounted.

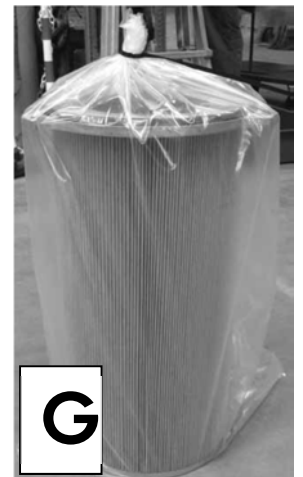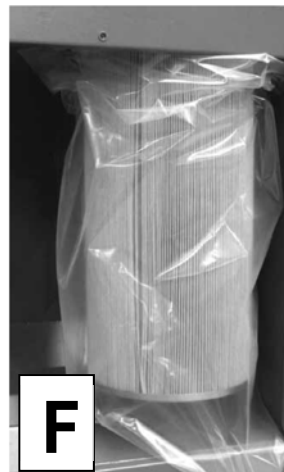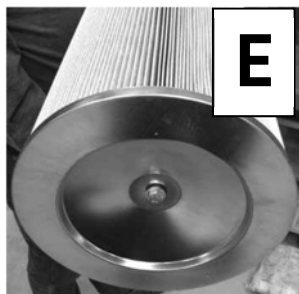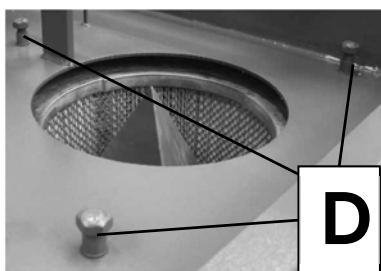

3.6. Filter element cleaning

Filter elements G102, G113, G115A and G116A can be cleaned, after having been dismantled as described in point 9.1. Filter cartridges are washed with high-pressure cleaner with wide nozzle spray at max. 50°C hot water. Possible soap without detergent.

Material G105 and G107 are not washable.

Nozzle distance: 30 – 50 cm (DO NOT FORGET: wide spray)

You wash the dirt from the dirty air side of the filter, so the net supports the filter cloth. Filter elements must be completely dry before operation.

New filter elements must in dimension be equal to original cartridge. Filter cloth quality must be according to filter job. Original type of filter elements can be seen on machine marking.

3.7. Jet valve exchange/repair

Exchange may only take place, when supply and compressed-air are not connected to unit and compressed-air tank is ventilated by compressed-air ventilating valve.

Coil, membrane and valve top are exchangeable by disconnecting electric plug, where after 4 pcs. M6-bolts are loosened and new are mounted.

4. Mounting

4.1. Unit delivery

Unit is received in 3 parts.

The cone (the lower part) with dust container is lifted from the pallet by the 4 mounted eyebolts. The cone is placed on the installation site.

The top lids in the filter module (the upper part) are dismantled. Outlet connection (the loose part) is mounted on the filter module, BEFORE the filter module is lifted into place on top of the cone.

NOTE:

Filter module is lifted with straps that is secured to the filter module by approved lifting shackles (see photo D & E).





NB! Lifting points are located on the unit that may NOT be used for unit lift.

Unit parts are bolted together. NB! Be aware of sealing. Damaged sealing are replaced.

Unit is bolted to an even, horizontal and firm surface with M10-bolts.

4.2. Filter unit placement

At filter unit placement the environment and fire demands must be considered.

4.3. Electrical connections

Electrical connection for differential pressure control type E2T is made in control box, which is connected to 230 V, 50Hz and earth.

DO NOT FORGET to close control box firmly after mounting. Humidity can destroy the print.

Connection must be in accordance with the Power Code and must be breakable from supply.

Electrical connection must be active and connected after fan stop for a duration of min. 5 cleaning cycles for all valves in the unit. Control box diagram is enclosed.

Unit may not be used without this connection.

4.4. Compressed-air connection

Compressed air connection must achieve min. 5.5 - max. 6.0 bar dry compressed-air. Connection by Cejn-coupling on unit front side. A pressure reducing valve and water separator can advantageously be used (½").

DO NOT FORGET compressed air at possible after-cleaning.

4.5. Ducting connection

The ducting connection must be made with approved ventilation pipes.

Connections are made with nipple measurements.

4.6. Rotary valve (optional)



Rotary valve chamber must be mounted airtight to filter unit and must be in operation during fan operation as well as during after-cleaning.

We can deliver adapters for rotary valves as well as rotary valves.

4.7. Adjustments

Every filter unit is dimensioned for a certain workload which may not be exceeded as it would result in an improper function of the unit or a premature lifespan.

The unit is dimensioned following the following criteria's :

_____	Maximum air volume
_____	Type of dusts

Type of fan :

Type of cartridges : xx cartridges G1 xx

Total surface area: xx m²

4.8. Differential pressure control

The units are delivered standard with differential pressure control.

Filter element cleaning takes place by differential pressure control type E2T, which is programmed by the manufacturer.

Be aware that the unit cleans as required. Unit must always clean at exceeding of differential pressure of 0.9 kPa (900 Pa).

Standard opening time for valve may not be changed from standard setting (0.24 sec).

Be aware that the pressure tanks in clean air chamber must be able to be filled between every shot.

Control will stand in automatic operation at receipt. Display shows first differential pressure, when it is at minimum 200 Pa.

Instructions for differential pressure control type E2T - see in the back of these instructions.

5. Noise damping

Average noise level excluding cleaning shot cycles : more or less 75 dB (A).


Average noise level including cleaning shot cycles : more or less 85 dB (A), this can be brought down to 75 dB (A) if an acoustic booth is placed on the header tank.

6. After maintenance

After maintenance electricity and compressed air are connected. Unit is tested and checked before operation.

7. Differential pressure control - type ECO-S

7.1. General description

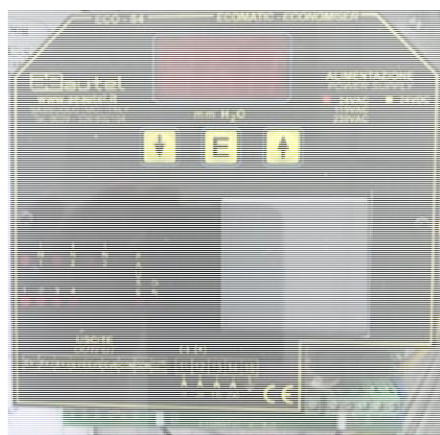

Economisers in the ECOMATIC-S range are digital sequential timers with built-in differential pressure switches.

The versions ECOMATIC-S4, ECOMATIC-S6, ECOMATIC-S12, ECOMATIC-S20 and

ECOMATIC-S32 enable control of up to 4, 6, 12, 20, and 32 solenoid valves respectively. The version ECOMATIC-S64 is equipped with an expansion card with 32 outputs, expanding control capacity to up to 64 solenoid valves. In the same way, the model ECOMATIC-S96 is equipped with 2 expansion cards for capacity expansion up to 96 solenoid valves.

In all versions there is a display with 3 digit that can display the differential pressure unit of programmed (tens Pa, mmH₂O, mbar, kPa and mmHg) or the number of the cleaning valve; the three keys also enable programming of parameters on the instrument according to personal requirements

including, pause time, operation time, post-cleaning time (or number of cycles) and washing start and end pressure, postcleaning pressure, alarm pressure and operation mode (automatic/manual) .

All models are equipped with LEDs to display activation of outputs, pause phases and power on, the power supply presence, the post-cleaning status, and so on and so on.

The controllers with AC power supply are able to control both electronic valves with AC input and electronic valves with 24VDC. The output stage is made up of triac with on/off to zero-crossing to reduce noise.

Each model is supplied in polycarbonate enclosures with transparent lids and IP56 protection rating.

On demand, the ECOMATIC-S instruments can be provided of an ACTIVE analogical output proportional to the pressure read by the sensor. The pressure interval allowed is programmable through two parameters: "P14" e "P15".

7.2. General features

Voltage:

24 Vac, 115 Vac, 230 Vac +/- 15%, 50-60Hz.

Fuses ECO-S 4/6, 12:

F2 general fuse 2A 5x20 rapid

F4 electro-valves power supply fuse 1.6A 5x20 delayed

Fuses ECO-S 20/32/64/96:

F1 general fuse 2A 5x20 rapid

	F2 electro-valves power supply fuse 1.6A 5x20 delayed
Working temperature:	-10 / +50 °C;
Connection:	Through screw terminals boards
Max Adsorbed Power:	50VA.
Input ECOMATIC-S 4/6/12/20/32/64/96:	n° 1 inputs opto-isolated
Relay Output ECOMATIC -S 4/6/12/20/32/64/96:	n° 1 relay 2A resistant load 115Vac
Relay Output ECOMATIC -S 20/32/64/96:	n° 4 relay 2A resistant load 115Vac
Electro-valves Output:	outputs triac with activation/deactivation <i>zero-crossing</i> 24, 115 o 230 Vac and 24Vdc with max. current 2A.

7.3. Technical features timer

Standard Pause Times:	Duration: 1- 999 sec	Precision: 0,1 sec
Standard Working Times:	Duration: 0.03 - 9.99 sec	Precision: 0,01 sec
Post Cleaning Times:	Duration: 1 - 999 sec	Precision: 0,1 sec

7.4. Technical features Active Analog Output (optional)

7.4.1. Current output

Visualization range :	From 4.0 to +20.0 mA (standard) / From 0.0 to +20.0 mA (optional)
Precision :	+/- 0.1 mA, +/- 1 digit.

Maximum load allowed : 500 Ohm

7.4.2. Voltage output

Visualization range :	From 0.0 to +5.0 V (optional) / From 0.0 to +10.0 V (optional)
Precision :	+/- 0.1 V, +/- 1 digit.
Minimum load allowed :	1K Ohm


7.5. Dimensions and features of ECOMATIC-S box

ECOMATIC-S is enclosed inside a box with IP56 protection rating.

ECOMATIC-S 4/6	Internal Dim. BxHxP (mm)	190 x 140 x 70
	Ø max allowed holes	37 mm
	Top screws (n. and type)	4 isol. Zipper pouncable
ECOMATIC12-S	Internal Dim. BxHxP (mm)	240 x 190 x 90
	Ø max allowed holes	37 mm
	Top screws (n. and type)	4 isol. Zipper pouncable
ECOMATIC-S 20/32/64/96	Internal Dim. BxHxP (mm)	380 x 300 x 120
	Ø max allowed holes	48 mm
	Top screws (n. and type)	4 isol. Zipper pouncable

7.6. Layout – Legend Board ECOMATIC-S

7.6.1. Layout ECOMATIC-S 4/6

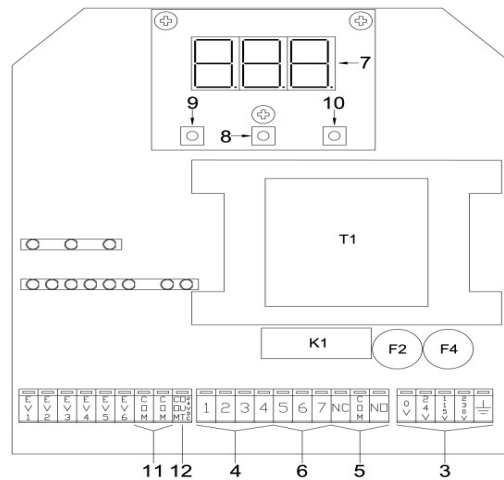

- 1 - F2, Power supply protection fuse
- 2 - F4, Electro-valves protection fuse
- 3 - Power supply terminals
- 4 - Input Contacts terminals

Terminals 1, 4: Post-cleaning input;

Input open: no-activated post-cleaning;

Input close: activated post-cleaning;

- 5 - Relay output terminals:

Terminals NC, COM, NO: Relay contact 1 (K1);

Terminals NC: Contact N.C.

Terminals COM: Common.

Terminals NO: Contact N.O.


- 6 - Auxiliary outputs terminals (optional, used with expansion boards):

Terminals 5,6,7: in case of terminals for expansion board 4-20mA;

Terminal 5: positive terminal for analogical output board;



Terminal 6: negative terminal for analogical output board;

Terminal 7: connection frame analogical cable (optional, but advised);

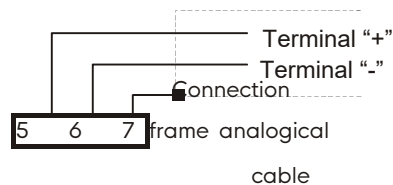


Note: the analogical output is an ACTIVE type.

- 7 - Display 7 Segments 3 DIGIT;
- 8 - Enter Key (E)
- 9 - Decrease Key (↓)
- 10 - Increase Key (↑)
- 11 - Common terminal by free contact for electro-valves
- 12 - Common terminal with + 24Vdc for 24Vdc electro-valves

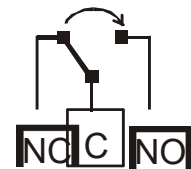

7.6.2. Layout ECOMATIC12- S

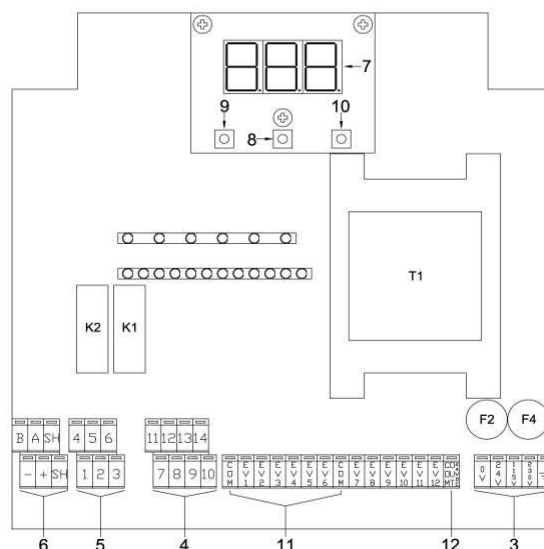

- 1 - F2, Power supply protection fuse
- 2 - F4, Electro-valves protection fuse
- 3 - Power supply terminals
- 4 - Input Contacts terminals

Terminals 7, 8: Post-cleaning input;

Input open: no-activated post-cleaning;

Input close: activated post-cleaning;

- 5 - Relay output terminals:

Terminals 4,5,6: Relay Contact 1;

Terminal 4: Contact N.C.

Terminal 5: Common.

Terminal 6: Contact N.O.

- 6 - Auxiliary outputs terminals (optional, used with expansion boards):


Terminals -, +, SH: Terminals for expansion board analogical output;

Terminal -: negative terminal for analogical output board ;

Terminal +: positive terminal for analogical output board;

Earth Terminal: connection frame analogical cable (optional, but advised);



B A S H

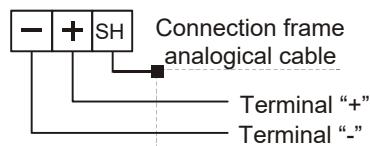

Note: the analogical output is an ACTIVE type.


- 7 - Display 7 Segments 3 DIGIT;
- 8 - Enter Key (E)
- 9 - Decrease Key (↓)
- 10 - Increase Key (↑)
- 11 - Common terminal by free contact for electro-valves

11 12 13 14

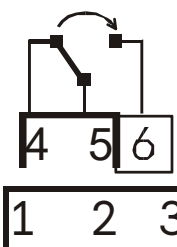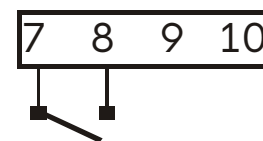

- 12** - Common terminal with + 24Vdc for 24Vdc electro-valves

7.6.3. Layout ECOMATIC-S 20/32/64/96

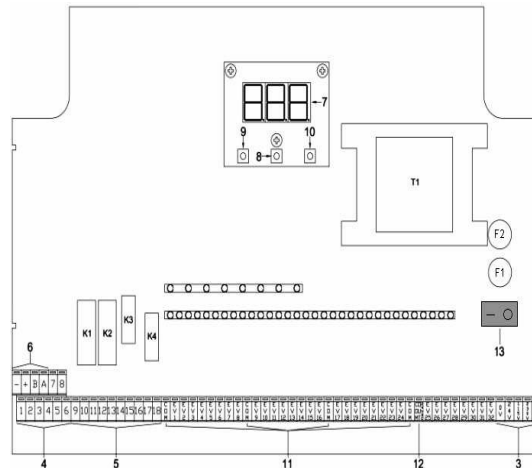


- 1** - F1, Power supply protection fuse.
2 - F2, Electro-valves protection fuse.
3 - Power supply terminals
4 - Input Contacts terminals:

Terminals 1, 2: Post-cleaning input

Input open: no-activated post-cleaning

Input close: activated post-cleaning

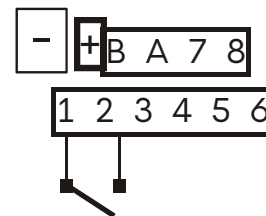


- 5** - Relay output terminals:

Terminals 9,10,11: Relay contact 1 (K1)

Terminals 9: Contact N.C.

Terminals 10: Common.

Terminals 11: Contact N.O.

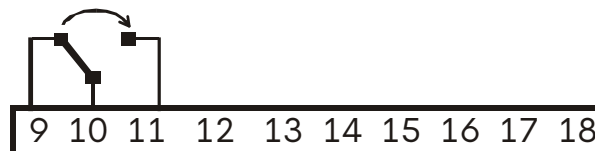


- 6** - Auxiliary outputs terminals (optional, used with expansion boards):

Terminals -, +, SH: Terminals for expansion board analogical output

Terminal - : negative terminal for analogical output board

Terminal + : positive terminal for analogical output board

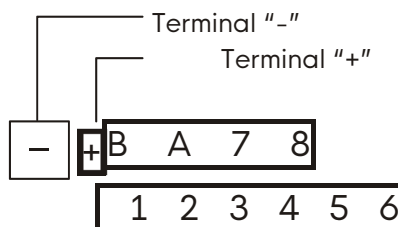

Note: the analogical output is an ACTIVE type.

- 7** - Display 7 Segments 3 DIGIT
8 - Enter Key (E)
9 - Decrease Key (↓)
10 - Increase Key (↑)
11 - Common terminal by free contact for electro-valves
12 - Common terminal with + 24Vdc for 24Vdc electro-valves
13 - On/Off Power Switch

7.7. Layout – Legend Delta-P Board ECOMATIC-S

In this device, you can choose the preferred measurement's unit through a P5 programmable parameter. Below are listed the maximum fields of reading pressure:

Measurement unit: Measurement range:	dPa from -99 to +999
Measurement unit: Measurement range:	mmH ₂ O from -99 to +999
Measurement unit: Measurement range:	mbar from -9.9 to +99.9
Measurement unit: Measurement range:	Kpa From -0.99 to +9.99
Measurement unit: Measurement range:	mmHg from -7.5 to +75.0
Precision:	+/- 1% F.S. , +/- 1 digit. Reference unit mmH ₂ O
Broken pressure:	0,5 bar (5000 mmH ₂ O).

7.7.1. Conversion Chart per Measurement units of pressure.

Equal to	mmH ₂ O	pascal	mbar	kpascal	mmHg
mmH₂O	1	9.8064	0.098064	0.0098064	0.07355592
pascal	0.101974	1	0.01	0.001	0.007500617
mbar	10.1974	100	1	0.1	0.7500617
kpascal	101.974	1000	10	1	7.500617
mmHg	13.5951	133.3224	1.333224	0.1333224	1

The temperature range of inlet gas to the pressure sensor is -40 ° C to +125 ° C. For values above or below it is necessary to provide cooling or heating gas.

7.8. ECOMATIC-S Power Supply

All the ECOMATIC-S models can have as power supply 3 different tensions 24 Vac, 115 Vac e 230 Vac.




CAUTION
Ensure that the power supply is disconnected before making or modifying cable connections.



The power supply has to be connected in this way (according to the chosen power supply).

7.8.1. ECOMATIC-S 4/6/12/20/32/64/96

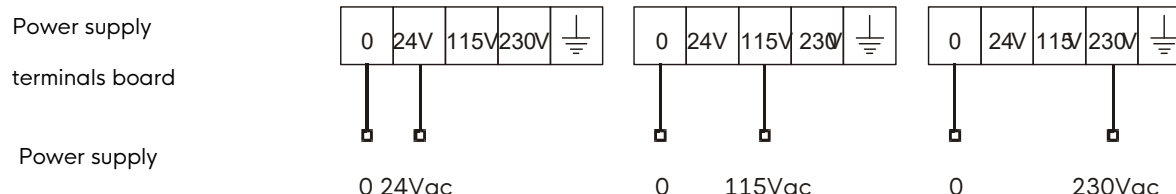

Note

- The power supply has to be sectioned *upstream* of the equipment.
- Both for the *economizers* and the *electro-valves* has to be done the earth connection.
- You have to use shielded cable, far from noise sources, like Inverter power cables and engines in general.

7.9. Electro-valves Connection Scheme

The solenoid valves are connected between output terminals 1 -2 ... - N and terminal C (common) which is connected to a suitable power supply via an external connection.

The controllers are equipped with more than one common terminal: obviously they are all interconnected and therefore do not require additional external connections.

According to the power supply given to the unit it is possible to use some types of electro valves. Here following the options:

- **Power supply 24 Vac:** it can be used **24 Vac** or **24 Vdc** electronic valves
- **Power supply 115 Vac:** it can be used **24 Vac**, **115 Vac** or **24Vdc** electronic valves
- **Power supply 230 Vac:** it can be used **24 Vac**, **115 Vac**, **230 Vac** or **24 Vdc** electronic valves

In case of controller's power supply with DC it is necessary to indicate it at the purchase order phase in order to adapt the circuit at this kind of output.


For the load's connection has to be done an external bridge connected according to the voltage of used electronic valves (to do the connection between the terminal C (common), and the power supply terminal, corresponding to the operating power of the electro valves). If you forget to do this connection, the electro valves will not be driven: the instrument will quickly scan all the outputs (the LEDs on the outputs will be switched on for a short time, and the pause LEDs will quickly blink) without activating any electro-valve.

N.B. : In the case of electro valves with 24DC, the connection bridge for the power supply of the load has to be done with ComOut 24VDC (output common with 24Vdc) and the terminal C (Common). This voltage is automatically created by the card and therefore it must not be supplied from outside.


The following pictures show the different kinds of connection that have to be made according to the working voltage of the electro-valves.

VOLTAGE SUPPLY VALVES VAC


ECOMATIC-NET 4/6

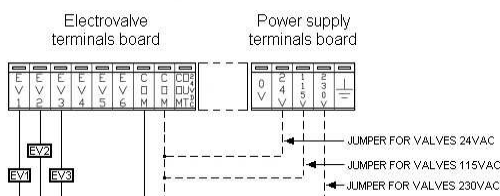

ECOMATIC-NET 12

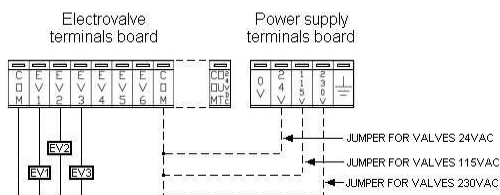


ECOMATIC-NET 20/32/64/96

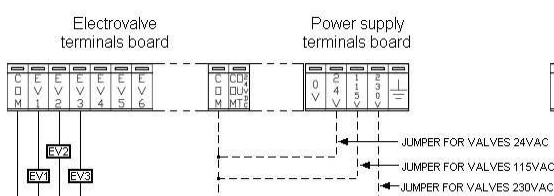


VOLTAGE SUPPLY VALVES VDC


ECOMATIC-NET 4/6

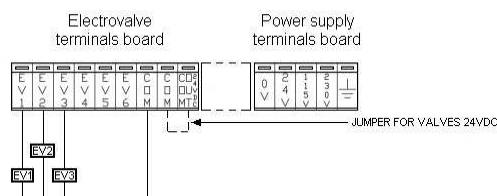

ECOMATIC-NET 12

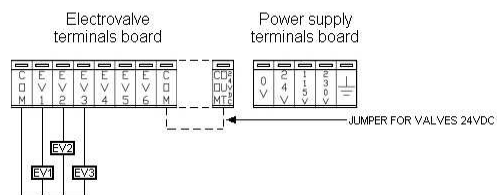

ECOMATIC-NET 20/32/64/96

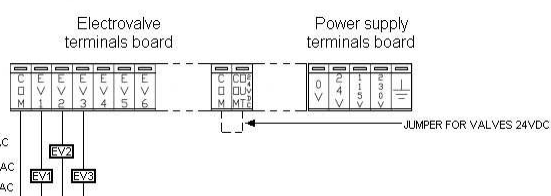

ECOMATIC-S cards are able to control up to 2 Electro-valves for a single output, or to activate up to 4 outputs at the same time for 110V/220V power supply and 2 outputs at the same time for 24VAC/DC power supply.

ATTENTION: to activate more than one electro-valve in parallel or on various outputs, you need to have *the same tension for valves power supply and instrument power supply*. In this way, the requested power is supplied by the supply net (e.i. instrument power supply 230VAC and coils 230VAC).


CAUTION

!!In all the models of ECOMATIC-S, in the case you have to drive two electro-valves at the same time, the value of two fuses on the board has to be changed:


- the one for general protection of 2A quick has to be changed into 4A quick and the one for load protection of 1.6A delayed has to be changed into 3.15A delayed.

In particular, in the versions ECOMATIC-S 64/96, the connection of the double electro-valves to the outputs on the expansions has to be done according to the following scheme:

1st expansion (both ECOMATIC-S64 and ECOMATIC-S96)

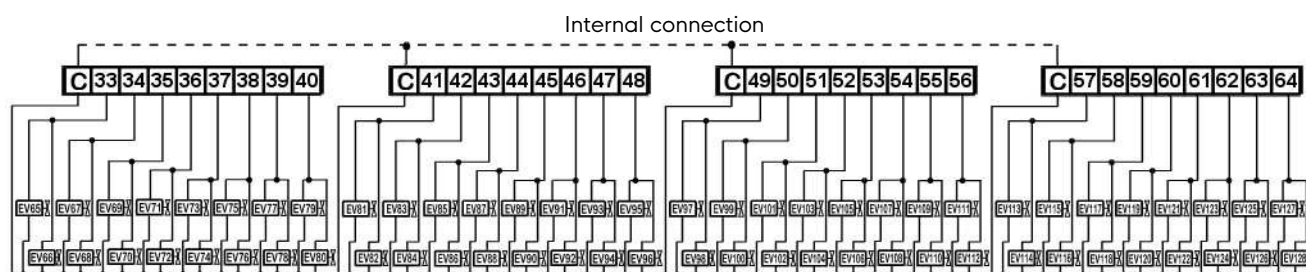

2nd expansion (just in the ECOMATIC-S96)

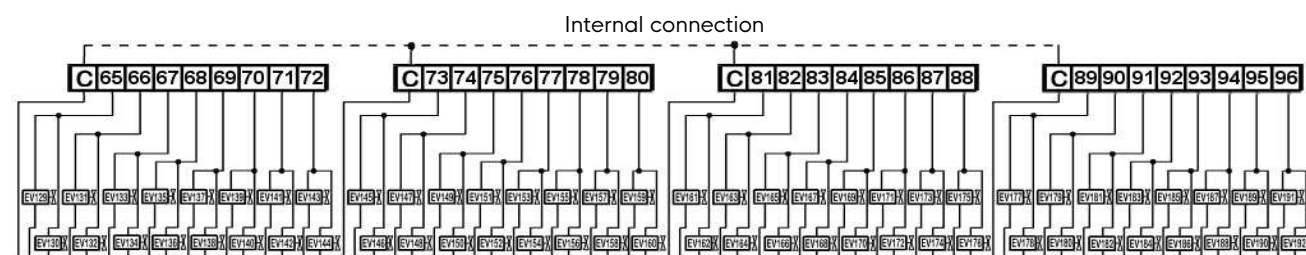

Note: For connecting the load of the double electro-valves on the *expansions* (ECOMATIC-S 64/96) it is necessary to do one *connection* between the terminal C (common) of the expansion board and the terminal C of the ECOMATIC-S32 board.

We suggest you to put the cables of electro-valves far from noise sources, like inverter power cables and engines in general;

7.10. Display visualization

Through the display you can see different information of the system, regarding pressure, output number or cleaning command, cycle status and value of analogical output. There are 2 or 3 visualization menu (3 if the analogical output is enabled) selected through the button **Inc** (↑) while the button **Dec** (↓) indicates which menu is visualizing. The three menus are divided as follows:

The 1° menu identifies the pressure value read by the instrument;

- visualization :
- followed by a number to identify the pressure measure unit.:

"Pr."

"0" tens Pascal

"1" mmH₂O

"2" mbar

"3" KPa

"4" mmHg

The 2° menu identifies the system status, the output number or cleaning command, and the command for cell opening or closing;

- if the system is in **STOP** or almost in stop, you will see: **"S.xx"**
- if the system is in **CLEANING**, you will see: **"U.xx"**
- if the system is in **POSTCLEANING**, you will see: **"P.xx"**

In all these statuses of the system, on the part xx you can view the following wordings:

- **number n°** (if it is an output for cleaning valve)
- **SC** (during the cycle start-up)

The 3° menu (if enabled) identifies the value of the analogical output

- visualization: **"Cor."** (if the output is in current)
- visualization: **"Vol."** (if the output is in tension)

7.11. Error visualization

7.11.1. Pressure error

When the instrument visualizes the pressure value, two indications of out of range are foreseen: if the input differential pressure is higher than the positive full scale set, the display will visualize the indication 'EEE'.

In the case the pressure would be lower than the negative full-scale set, the display will visualize the indication '-EE'.

7.11.2. E2PROM Error

In the case we will have problems with the configuration of the E2prom, the instrument will visualize on the display the indication "---" to show the loss of programming and setting data.

Pressing the key Dec (↓) the normal function of the instrument will be reloaded as well as the default data, although it will be necessary to do once more the setting and programming phase by qualified people in the company.

7.12. Preliminary Procedures

At the ignition, the unit will be ready for the visualization of the differential pressure value read by the internal sensor.

With the button Inc (↑) or Dec (↓) you can look through the visualizations of the pressure, the number of valve in cleaning and of the value in analogical output (if enabled).

To enter in the programming menu is enough to press the key E: it will appear the first parameter L1.

N.B. Please pay attention to this menu because it is where the proper function of the board comes from.

Pressing continuously the key Inc or Dec, it will be possible to look at one by one all the parameters.

The exit from the programming menu is automatic after 10 seconds when you do not press any key during the parameters scrolling.

7.13. Programming Parameters

The following table shows all the available parameters, explaining the function and the admissible range of values.

Param.	Function	Possible values	Default values	Notes
L1	Hourcounter.	0 – 65534 hours		Hourcounter functioning
L2	Cyclecounter	0 – 65534 cycles		Cyclecounter functioning
P1	Pause time	1 – 999 seconds	20 (5-30)	Automatic and Manual functioning
P2	Working time	0.03 – 9.99 seconds	0.25	
P3	Value of time or cycles.	1 – 999 seconds 1 – 999 cycles	5	Postcleaning functioning
P4	Postcleaning function.	0=Disabled 1=Internal 2=External	1	
P5	Unit pressure measure	0 = tens Pa 1 = mmH ₂ O 2 = mbar 3 = Kpa 4 = mmHg	3	Unit pressure measure
P6	Postcleaning time or cycles selection.	0= Time 1= Cycles	1	Postcleaning functioning
P7	Man./Auto	0=Manual 1=Automatic	1	
P8	Start cleaning pressure	From 0 to F.S. positive	0.90	Automatic functioning
P9	End cleaning pressure.	From 0 to F.S. positive	0.40	Postcleaning functioning
P10	Internal postcleaning pressure threshold	Da 0 al F.S. positive	0.1	
P11	Relay 1 pressure threshold	From 0 to F.S. positive	G115AV = 2.30 G116A = 3.00	Relay Output functioning
P12	Enable precoating.	0=Disabled 1=Enabled	0	Precoating Functioning
P13	Precoating threshold	From 0 to F.S. positive	1.20	
P14	Value of pressure responding to the minimum value of the analog output	From 0 to F.S. positive		Analog output functioning
P15	Value of pressure responding to the maximum value of the analog output	From 0 to F.S. positive		
P16	Relay 1 functioning selection.	0 – 1	0	Relay Output functioning
P17	Function of relay 1.	0=Normal 1=Temporized 2=Hysteresis pressure	0	
P18	Value of relay 1 function.	From 1 to F.S. positive or from 1 – 999 seconds	1	
P19	Pause time in post-cleaning mode	1 – 999 seconds	3	Post-cleaning functioning
H0	Pressure zero	To be done by specialized staff <i>only if</i> the pressure with open air vents is appreciably different from zero		

7.14. ECOMATIC-S Function

ECOMATIC-S instruments have two possibility to clean the filters, to be set in parameter P7.

The filter cleaning mode are Manual or Automatic.

With the Automatic functioning you can have a real save in air consumption and on the life of bags and filters, because you operate only when necessary.

Let's see in details these single functioning modalities:


Manual: the ECOMATIC-S drives one by one the output correspondent to the connected valves, regardless any kind of programming. The driving of the outputs starts from the first electro-valve, going ahead with the second, the third and so on and so on, after which starts again from the first. The working time and pause time will alternate each other between the activation of one output and the other.

Automatic: the electro-valves will be activated if the visualized pressure is higher to the one set in the parameter **P 8** (starting cleaning pressure); the activation itself will be interrupted as soon as the pressure will go down the value set in the parameter **P 9** (end cleaning pressure).

When the pressure goes down the end cleaning pressure, the normal cycle of function will be stopped just if the ECOMATIC-S is on pause phase and after the last valve of the cycle.

7.15. Delta-P Tubes Connection Scheme

Disposal of pressure tube connection on the ECOMATIC-s device are as follows:

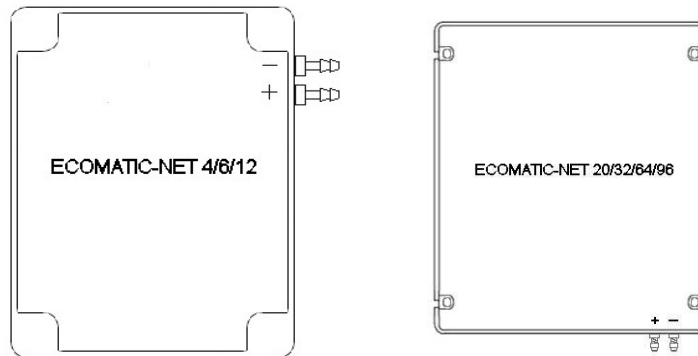


With the installation of pressure gauges is recommended the installation of filtered outlets to limit possible failure internal pressure sensor.

These filters prevent dust or other substances to be traced back to the pressure sensor and small bodies to obstruct the flow inside the tubes.

It can also be possible not to use these filters, but at the expense of the safety of the instrument.

These filters are mounted directly on the filter where they are usually positioned in the outlet pipes. It is recommended to install a filtered outlet for each pressure tube applied, both with the extent of Delta-P inside the filter:

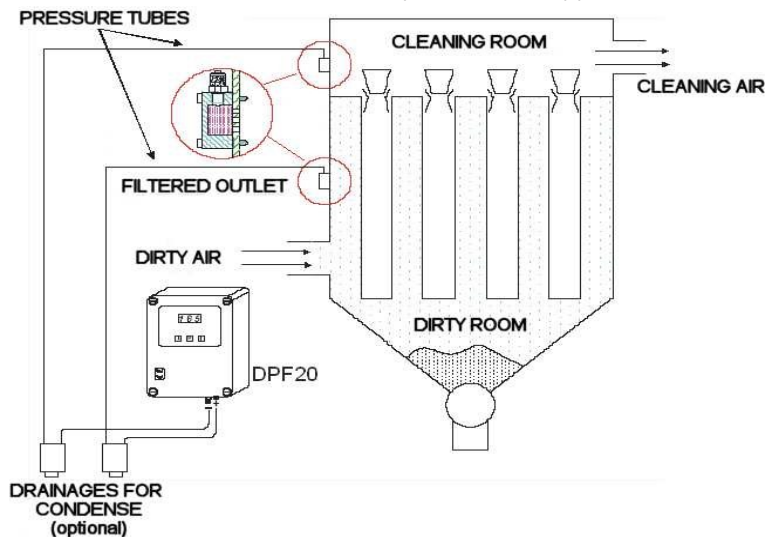


The pressure hose recommended is the Rilsan type 6x4.

The positive nozzle of the instrument must be connected to the dirty room while the negative nozzle must be connected to the clean room of the filter.

At temperatures above 125 °C it is necessary to reduce the level of inlet sensor temperature in order to fall within the permissible temperature range (-40 °C / 125 °C). To do this we suggest using a length of copper tubing needed to dissipate excess heat.

Let's have a look now at the installation of these filters in details.

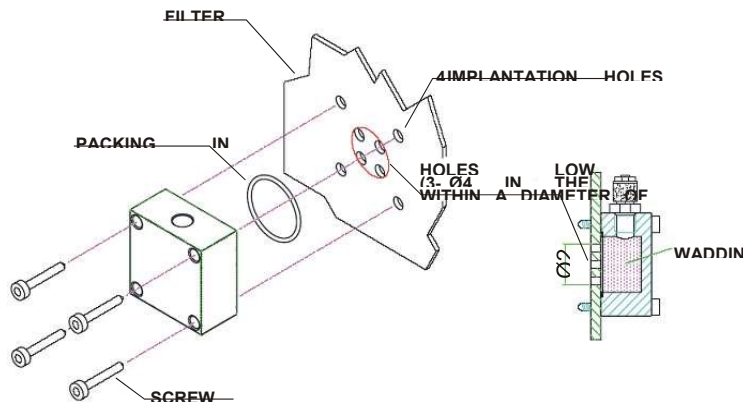

7.16. Pressure Zero Setting

During the operation it may happen that the pressure on the display slightly different for equal pressure applied to the sensor, due to the changing conditions of temperature, humidity, etc..

To restore the correct pressure, you must perform an operation to eliminate the pressure reading of the instrument.

Entering programming using the key E in the menu and make sure that the jets of grafting of the tubes are free, i.e. not connected to the pipes from the air filter.

Pressing Inc select the parameter H 0 and follow the steps listed below:

- Press **E** (flashes the message **0**); - Wait 4 or 5 sec.;
- Confirm the reset by pressing the **E** key (the display will show once more the indication **H 0**)
- Wait 10 seconds so that the display returns to the pressure value and verify that the reading is 0.



CAUTION

Pressure can be reset (parameter **H 0**) only if the pressure reading on display with outlets open is notably different from zero. This operation must be carried out exclusively by skilled personnel and only after the instrument has been switched on for at least 15 minutes.

7.16.1. Output test activation function

It is possible to use a particular configuration of the card to prove each exit in case it becomes necessary during the testing, maintenance or any mal operations.

To join this setup go with the key Dec (↓) on the number visualization of the active output. In this condition simultaneously press the keys Inc (↑) e Dec (↓) and so it enters the menu of test outputs. Once you will enter you will see the number of outputs by activating flashing.

To activate the visualized output press the key E, while to change the number of output use the keys Inc (↑) and Dec (↓). The minimum time that must pass for a shot through the following key E is 1 second. To return to the normal cycle of operation simultaneously press all three keys.

7.17. Active Analogical Output Functioning (optional)

ECOMATIC-S can provide a current or tension output, which changes in a linear way. When you place the order, you need to indicate the solution you need. Current or Tension output must be specified in order phase, as standard this option will be supplied with current output.

7.17.1. Current output

It is possible to generate a current which change in a linear way between 4-20 mA or between 0-20 mA in output, through the programming of P 14 e P 15 parameters.

P 14 parameter corresponds to the pressure which has to be supplied to obtain a current output equal to 4 mA or 0 mA. P 15 parameter corresponds to the pressure which has to be supplied to obtain a current output equal to 20 mA. According to the displayed pressure, it is possible to generate a current output linear function of the pressure.

N.B. : Max applicable load 500 ohm.

7.17.2. Tension output

It is possible to generate a tension which change in a linear way between 0-10V or 0-5V in output, through the programming of P 14 and P 15 parameters.

P 14 parameter corresponds to the pressure which has to be supplied to obtain a current equal to 0V. P 15 parameter corresponds to the pressure which has to be supplied to obtain a current equal to 5V or to 10V. On the basis of the displayed pressure, you can generate current output linear function of pressure.

NOTE: Minimum load applicable 1 Kohm.

7.17.3. Analogical output connection

Connection between ECOMATIC-S and expansion card 4-20 mA and a potential external has to be performed using the following terminals on the basis of the instrument model:

- for ECOMATIC-S 4/6, terminals n°5 (+) , n°6 (-) and n°7 (earth) ;
- for ECOMATIC-S 12/20/32/64/96, terminals +, - and earth as indicated in the printed.

7.17.4. Hour-counter function


The value hour-counter is possible to be visualized in the parameter L 1 from the programming menu. The hours counter starts to count when the pressure visualized on the display is higher or equal to the one set in the parameter P 10 (post-cleaning pressure).

The maximum value that can be set for the number of hours is "65534", after which the counter is reset automatically.

Although the instrument is fitted with a 3-digit display, numbers comprising up to 5 digits can be displayed: for values from 0 to 999, the number of hours is displayed as normal; for values greater than 999, the display cannot show the entire number but when one of the 2 outer numbers (left or right) flashes, this indicates that the number on display is not complete. If the left number flashes, the remaining numbers for display are to the left and vice versa. If both numbers flash this means that there is a number remaining both to the left and right.

Example

If the number displayed is "954" and the number 9 is flashing, this means that there is a hidden number to the left of the number 9. Press "inc" to display the number to the left (the other numbers are shifted to the right). At this point, the number displayed is "395" but the whole number is "3954"; in this case the number 5 flashes to indicate a number remaining to the right. Press "Dec" to display the number to the right (the other numbers are shifted to the left, concealing the first figure to the left); the figure "954".

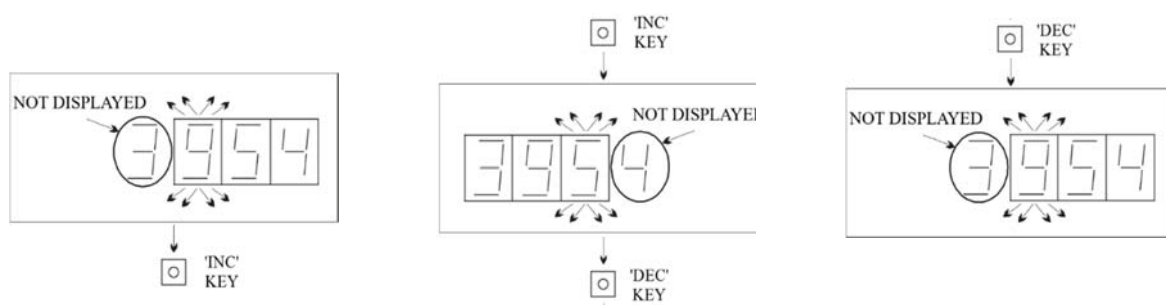

7.17.5. Cycle-counter function

Parameter L2 enables access and display of the counter monitoring operation cycles performed during output scanning.

The counting is done every time one complete cycle of activation of outputs even if these are not connected.

The total number of possible cycles is "65534", after which all stored values in the counter memory are reset.

The method to display the number of cycles is as described above for the hour counter.

7.18. Relay Output Functioning

The relays present on the ECOMATIC-S have different ways of functioning, selectable in the programming menu. Each relay is independent from the others, with its own parameters and with the possibility to activate every relay in a different way. The possible ways of functioning are:

1) = 0 as minimum relay:

- a) standard (see paragraph **STANDARD MINIMUM RELAY**);
- b) temporized relay (see paragraph **TEMPORIZED OUTPUT**);
- c) hysteresis (see paragraph **HYSTERESIS OUTPUT**);

2) = 1 as maximum relay:

- a) standard (see paragraph **STANDARD MAXIMUM RELAY**);
- b) temporized relay (see paragraph **TEMPORIZED OUTPUT**);
- c) hysteresis (see paragraph **HYSTERESIS OUTPUT**);

7.18.1. Relay of standard minimum and maximum

Let's suppose to work with relay 1 as minimum standard relay.

First of all, we need to set the value 0 in parameter P 16 and P 17, in P 11 the pressure value of relay work. When the pressure is equal or less then pressure in P 11, our relay will be activated.

Let's suppose to work with relay 1 as maximum standard relay.

First of all, we need to set the value 1 in the parameter P 16 and value 0 in the parameter P 17, in P 11 the pressure value of relay work. When the pressure is major then pressure in P 11, our relay will be activated.

7.18.2. Temporized output

The temporized output allows us to activate the relay with a settable pressure gap.

1) E.i.: relay 1 as minimum temporized relay.

First of all, we need to set the value 0 in P 16 parameter, in P 11 parameter the pressure value for relay, in P 17 the value 1 and in P 18 our time value.

Let's suppose P 11 equal to 20 mmH₂O and P 18 equal to 3 sec.

The functioning of our relay will be the following:

- the relay will be activated after 3 seconds when the pressure will be equal or less than 20 mmH₂O;
- the relay will be deactivated when the pressure will be more than 20 mmH₂O.

2) E.i.: relay 1 as maximum temporized relay.

First of all, we need to set the value 1 in P 16 parameter, in P 11 parameter the pressure value for relay, in P 17 the value 1 and in P 18 our time value.

Let's suppose P 11 equal to 20 mmH₂O and P 18 equal to 5 sec.

The functioning of our relay will be the following:

- the relay will be activated after 5 seconds when the pressure will be more than 20 mmH₂O;
- the relay will be deactivated when the pressure will be equal or less than 20 mmH₂O.

7.18.3. Output with hysteresis

Output with hysteresis allows us to activate and deactivate the relay with a settable pressure gap.

1) E.i.: relay 1 **as minimum relay and pressure hysteresis**

First of all, we need to set the value 0 in parameter P 16, in P 11 parameter the pressure value for relay, in P 17 the value 2 and in P 18 our hysteresis pressure.

Let's set P 11 equal to 20 mmH₂O and P 18 equal to 4 mmH₂O.

The functioning of our relay will be the following:

- the relay will be activated when the pressure will be equal or less than $20-4=16$ mmH₂O;
- the relay will be deactivated when the pressure will be more than $20+4=24$ mmH₂O.

2) E.i.: relay 1 **as maximum relay and with pressure hysteresis**

First of all, we need to set the value 1 in P 16 parameter, in P 11 parameter the pressure value for relay, in P 17 the value 2 and in P 18 our hysteresis pressure.

Let's set P 11 equal to 20 mmH₂O and P 18 equal to 4 mmH₂O.

The functioning of our relay will be the same:

- the relay will be activated when the pressure will be more than $20+4=24$ mmH₂O;
- the relay will be deactivated when the pressure will be equal or less than $20-4=16$ mmH₂O

7.19. Post-Cleaning Functioning

Post-cleaning is activated through the closing of an external contact (if **P 4=2**), or when the pressure is *lower* than the value set in **P 10** parameter (se **P 4 =1**); the economizer scans in sequence all the outputs, alternating work time (**P 2**) to pause time (**P 19**). The process ends after a *time* (if **P 6=0**) or the *number of cycle* (if **P 6= 1**) set in **P 3** parameter.

The internal post-cleaning (**P 4 =1**) has effect in Automatic and not in the manual functioning.

The external post-cleaning (**P 4 =2**) has effects in all the functioning modalities.

The post-cleaning cycles begin to be counted starting from the first crossing of the electro-valve N°1 to consider complete scan cycles. If the post cleaning starts from valve N° 10 having 12 valves in total, the first cycle will be composed by 12 + 3 (10-11-12) valves.

Note: if **P 4 = 1**, the activation of the post-cleaning cycle can take place only if the device, after the ignition, has passed the threshold set in **P 10** at least one time.

7.20. Precoating Functioning

When the ECOMATIC-S is set to Automatic, the parameter **P 12 = 1** and the parameter **P 13** is set to a value higher than the start pressure cleaning or minimum pressure, the tool remains stationary (in stop) till the pressure on the display shall not exceed the pressure of pre-coating.

After passing this threshold, the cyclical starts and now it behaves normally, that is the function of pre-coating is automatically disables permanently (even power cycle the instrument, the disabled remain stored).

NOTE: To re-enable the function of pre-coating is necessary again to force the parameter **P 12 = 1**.

8. Dismantling and recycling


When dismantling a unit, be sure to keep in mind the following important information:

- As the unit is dismantled, set aside all still functioning parts to re-use them on another unit.
- You should always separate the different materials depending on their type: iron, rubber, oils, greases, etc...
- Recyclable parts must be disposed of in the appropriate containers or brought to a local recycling company.

The rubbish must be collected in special containers with appropriate labels and disposed of in compliance with the national laws and/or local legislations in force.

CAUTION !

It is strictly forbidden to dispose of toxic wastes in municipal sewerage and drain systems. This concerns all oils, greases, and other toxic materials in liquid or solid form.

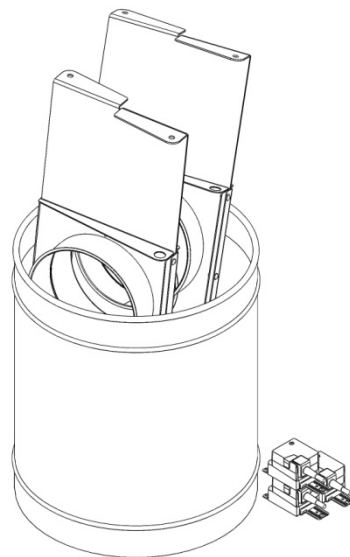

9. Maintenance log

Main inspection					
Inspection no.	1	2	3	4	5
Date for service:					
Service technician (email)					
Machine no:					
Dust type:					
Δ Pa at service:					
Filter replaced (yes/no):					
Main inspection					
Inspection no.	6	7	8	9	10
Date for service:					
Service technician (email)					
Machine no:					
Dust type:					
Δ Pa at service:					
Filter replaced (yes/no):					
Main inspection					
Inspection no.	21	22	23	24	25
Date for service:					
Service technician (email)					
Machine no:					
Dust type:					
Δ Pa at service:					
Filter replaced (yes/no):					
Main inspection					
Inspection no.	26	27	28	29	30
Date for service:					
Service technician (email)					
Machine no:					
Dust type:					
Δ Pa at service:					
Filter replaced (yes/no):					



Contacts

Formula Air The Netherlands

Head Office / Production / Sales

Bosscheweg 36
5741 SX Beek en Donk,
The Netherlands
+31 492 45 15 45
info-nl@formula-air.com

Formula Air Belgium

Logistics / Sales

Rue des Dizeaux 4
1360 Perwez
Belgium
+32 81 23 45 71
info-be@formula-air.com

Formula Air Baltic

Production / Sales

P. Motiekaičio g. 3
LT-77104 Šiauliai
Lithuania
+370 41 54 04 82
info-lt@formula-air.com

Formula Air France – West

Sales

6, avenue des Lions
44800 Saint-Herblain
France
+33 9 72 15 29 38
contact-ouest@formula-air.com

Formula Air France – North

Sales

Zac de la Carrière Dorée
BP 105, 59310 Orchies
France
+33 9 72 15 29 38
contact-fr@formula-air.com

Formula Air France – East

Sales

2, rue Armand Bloch
25200 Montbéliard
France
+33 9 72 15 29 38
contact-est@formula-air.com

Formula Air France – South

Sales

Chemin de Peyrecave
09600 Regat
France
+33 9 72 15 29 38
contact-sud@formula-air.com

Formula Air Germany

Sales

Dr.-Oetker Straße 10
54516 Wittlich
Germany
+49 6571 269860
info-de@formula-air.com

Formula Air Vietnam

Production / Sales

#33, Lot 2, Den Lu 1
Hoang Mai District, Hanoi
Vietnam
+84 (24) 38 62 68 01
info@vinaduct.com

Formula Air Nordic

Sales

Stortorget 17
211 22 Malmö
Sweden
+46 40 654 06 10
info-scan@formula-air.com

Formula Air Export

Sales

Rue des Dizeaux 4
1360 Perwez
Belgium
+32 81 23 45 71
info-be@formula-air.com